


Sizing Chart: JoViPak Head & Neck



Sizing Chart

How To Measure

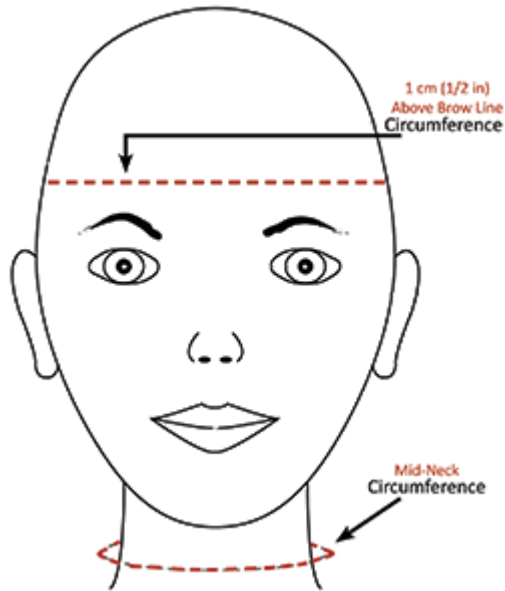

Head Circumference Neck Circumference

Small	21" - 22" (53.3 - 55.9 cm)	11" - 13" (28 - 33 cm)
Medium	22" - 23" (55.9 - 58.4 cm)	13" - 15" (33 - 38.1 cm)
Large	23" - 24" (58.4 - 61 cm)	15" - 17" (38.1 - 43.2 cm)
X-Large	24" - 25" (61 - 63.5 cm)	17" - 19" (43.2 - 48.3 cm)
2X-Large	25" - 26" (63.5 - 66 cm)	19" - 20 1/2" (48.3 - 52.1 cm)

Print Sizing Chart

Close