

Size Chart For Juzo Assist

3611 / 3612

| | I | II | III | IV | V | Length |
|--------------|---------------------------|-----------------------------|-------------------------------|-------------------------------|-------------------------------|--|
| Calf | 29-38 cm 17 1/2" - 15" | 34-43 cm 13 1/4" - 17" | 37-49 cm 14 1/2" - 19 1/4" | 41-53 cm 16 1/4" - 21" | 46-58 cm 18" - 23" | AD Short 13" - 15 3/4" / 34-40 cm |
| Ankle | 18-21 cm 7" - 8 1/4" | 21-24 cm 8 1/4" - 9 1/2" | 24-27 cm 9 1/2" - 10 3/4" | 27-31 cm 10 3/4" - 12 1/4" | 31-35 cm 12 1/4" - 13 3/4" | AD Regular 15 3/4"-18 1/4" / 40-46 cm |

PCSZ-01-02j